

## **(Instruction sheet to appear on flavors and machine rental page.)**

### **Setting up your margarita machine**

- Do not use a household extension cord as it can damage the machine and then the machine will not work.
- All machines come with a heavy gauge cord attached. Please do not remove this cord.
- Connect the machine directly to a power outlet.
- This machine requires a dedicated power circuit (15-amps) with nothing else running on that circuit.

### **Classic margarita mix**

1. Pour 14 quarts of water into bucket provided
2. Add one bottle of regular lime mix.
3. Pour 3.5 liters of tequila into bucket.
4. Give mix a quick stir to combine the liquids.
5. Remove lid from machine and pour all of the mix into the top hopper.
6. Turn on the machine – toggle switch to the left.

### **All other flavors**

1. Pour 10 quarts of water into the bucket provided
2. Add one bottle of flavor mix
3. Add 2 liters of alcohol (if using)
4. Give mix a quick stir to combine the liquids.
5. Remove lid from machine and pour all of the mix into the top hopper.
6. Turn on the machine – toggle switch to the left.

***\*if making "virgin" drinks add ½ gallon extra water to mix.***

Turn on the machine correctly using the 3-position toggle switch and wait 45 minutes for the to freeze down.

***Troubleshooting tips for the most common problems that you can fix in a couple of minutes.***

***Problem: The machine has been on for an hour and is not freezing down***

*Look at the front of the machine where the mix is circulating.*

*If it is moving very slowly then this is definitely a power issue. Remove any extension cords and plug the machine directly into a power outlet. You should see an immediate change in the circulation speed and the problem is solved.*

***If it is moving fast then it is likely that the TOGGLE switch is in the CLEAN position.***

*Make sure that that the toggle is in the ON / left position – see above photo.*

*You will still have to wait about 45 minutes to allow the machine to completely freeze down.*

*Remember it is preferable if the power circuit you are using has no other equipment/appliances using it.*



*Emergency numbers if your machine is not working*  
**310 920 7835 and 310 920 7839**